


PORTAGE COUNTY EMERGENCY MANAGEMENT  
BUILDING NUMBER IDENTIFICATION (BNI)  
PLACEMENT STANDARDS

EXHIBIT H

MORE THAN 75 FEET FROM THE CENTER OF THE STREET

Building numbers will be installed approximately 12 feet on either side of a driveway when the structure is more than 75 feet from the center of the street, or if the structure is obstructed by foliage or fencing.

EXAMPLE:

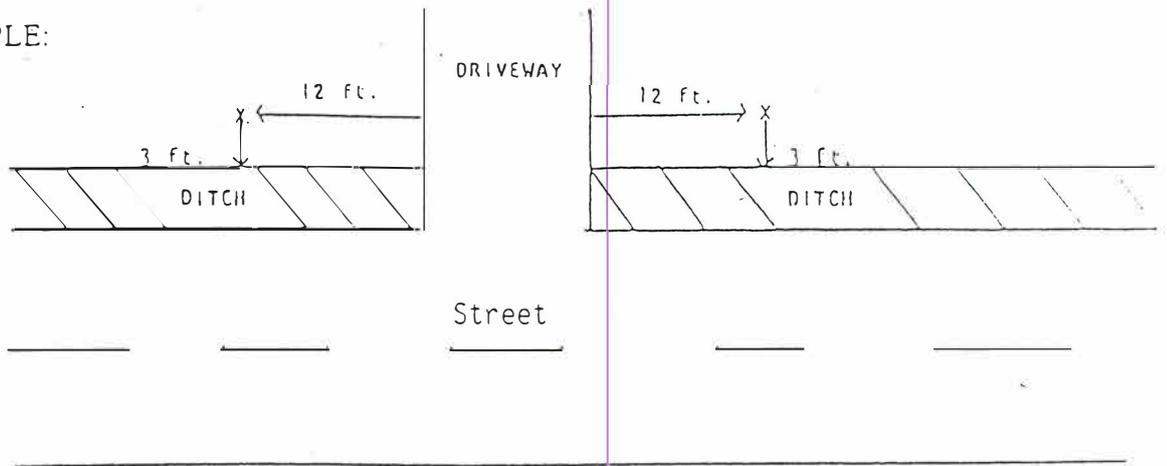

LESS THAN 75 FEET FROM THE CENTER OF THE STREET

Building numbers will be installed on the building or structure, in close proximity to the entrance door providing the greatest visibility when the structure is less than 75 feet from the center of the street.

EXAMPLE:

